



Appendix




Descaling procedure

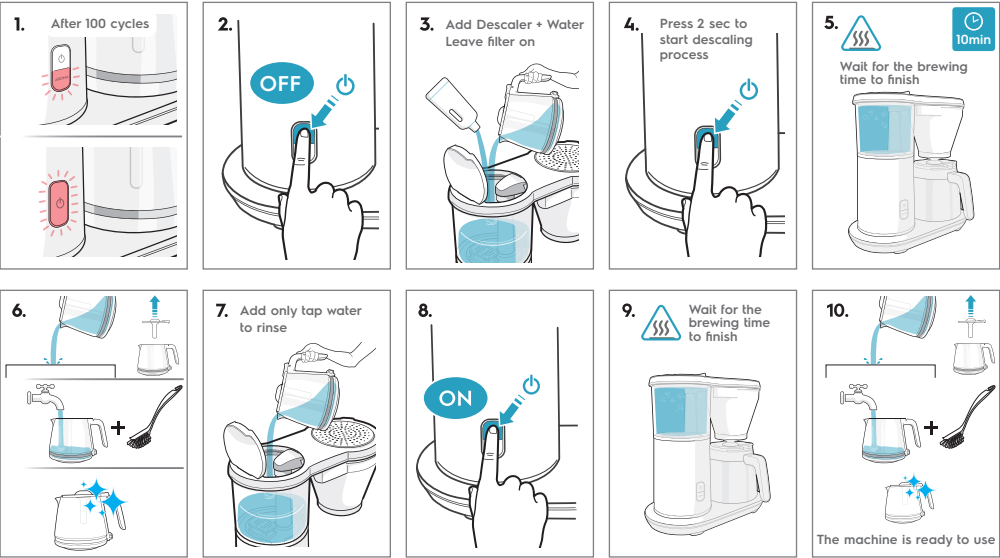

Stop descaling alarm

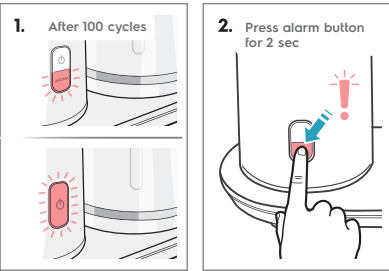



Preheat machine

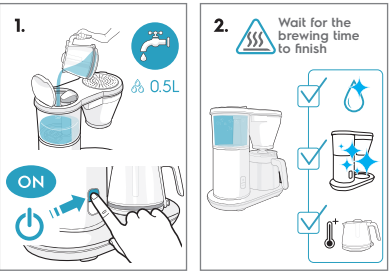

* Always preheat the machine in case there are less than 4 cups or if the machine hasn't been used in a long time.

Explore 7 Coffee Maker



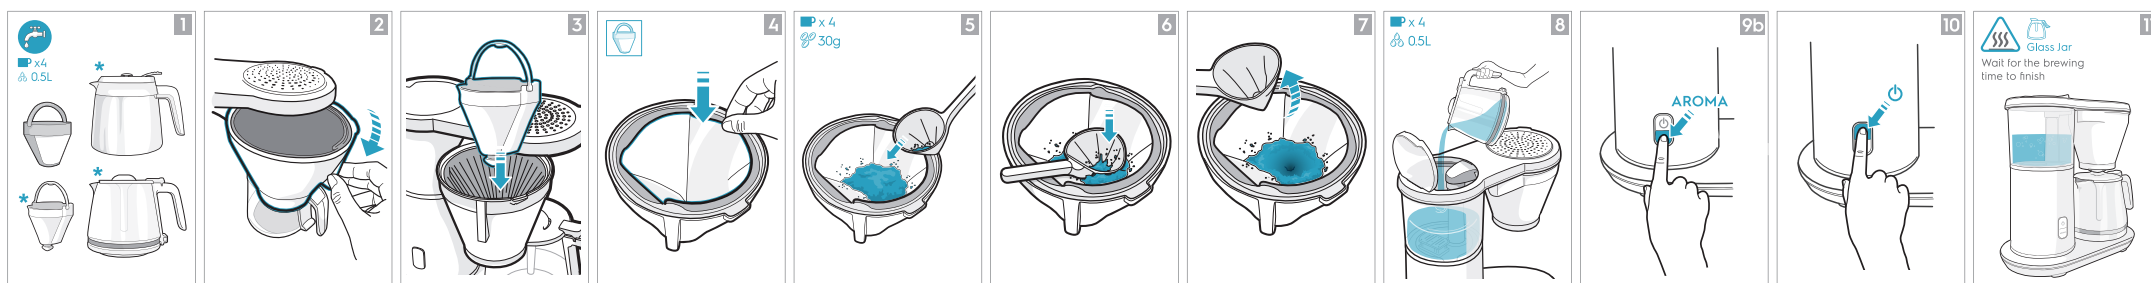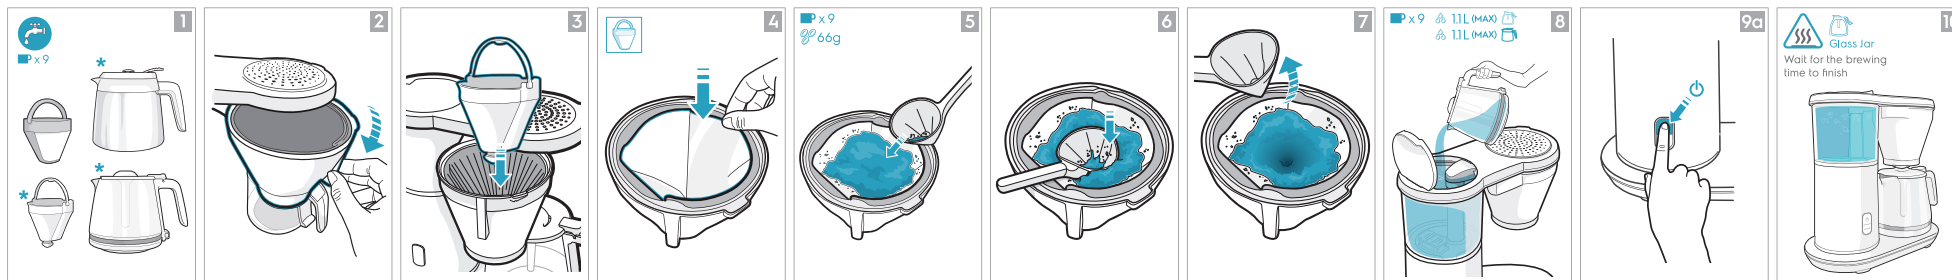

* Only available in some models
 * afh ngerafmodell
 * vaihteleem llittain
 * avhengig av modell
 * beroende p  modell

Push Aroma button to enhance flavor for up to 5 cups of coffee

