

Airstyler 5-i-1

BRUGERMANUAL



Before using this hair styler, please read these instructions carefully and keep the manual for future reference.
220-240V ~50-60Hz 1200W CLASS II

Safety Instructions

Please read the safety instructions before using this hair styler. These instructions are designed to ensure proper and safe use and to prevent injury to yourself or others.

WARNING: Failure to follow the instructions below may result in fire, burns, explosions, short circuits, or electric shock.

Electrical Conditions

1. Do not use the hair styler near water.



The symbol on the appliance indicates: "Do not use this hair styler near bathtubs, showers, basins, or other containers with water."

2. Always turn the hair styler off (position "OFF") when not in use and before unplugging it. Always unplug the device by pulling the plug, not the cord, to avoid accidents or fire hazards.
3. Ensure that the voltage of the hair styler matches the local voltage before connecting it.
4. Do not unnecessarily modify, damage, or bend the cord, and do not place heavy objects on it. If the cord becomes hot or damaged, stop use immediately.
5. When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.
6. For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Consult an electrician for advice.

Using the Hair Styler

1. Stop use immediately if the hair styler does not produce continuous airflow, or if the cord/plug is damaged or becomes hot.
2. Never insert foreign objects into the air inlets or outlets.
3. Do not use the hair styler near flammable materials such as gasoline, thinner, or sprays.
4. Avoid using the hair styler with wet hands or in areas with high humidity.
5. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children must not play with the appliance. Cleaning and maintenance shall not be made by children without supervision.

Repairing the Hair Styler

1. Never attempt to repair, disassemble, or modify the hair styler yourself.
2. If the cord is damaged, it must be replaced by the manufacturer, an authorized service agent, or a similarly qualified person.
3. If the plug or cord is damaged, stop using the appliance and contact an authorized service center.

Precautions

1. Avoid touching the air outlets during or after use, as they may become very hot.
2. Use the hair styler only on human hair. Do not use it on children or animals.
3. Ensure that hair is not sucked into the air inlets.
4. Do not use solvents such as thinner or gasoline for cleaning.
5. The appliance is equipped with overheating protection that activates in case of excessive heat. Turn off the device, allow it to cool, and remove any obstructions before restarting.
6. Burn hazard. Keep the appliance out of reach of young children, especially during use and cooling down.
7. When the appliance is connected to the power supply, never leave it unattended.
8. Always place the appliance on a heat-resistant, stable, and flat surface.


Maintenance

Clean the air inlets and outlets at least once a month to prevent blockages. Make sure the appliance is turned off and unplugged before cleaning.

Symbol Explanation

- V: Volt
- Hz: Hertz
- W: Watt
- ~: Alternating current
- □: Class II appliance

Identification of Parts

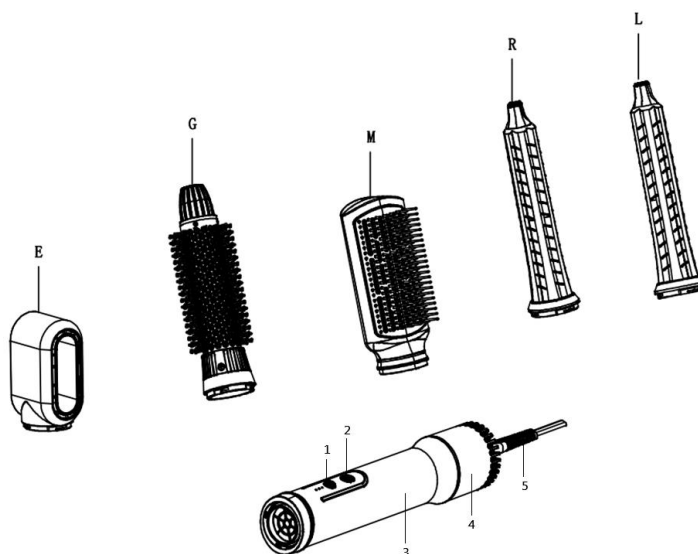

1. Temperature and speed button (1-2-3 heat setting)
2. ON/OFF button
3. Handle
4. Rear clip
5. Swivel cord

Accessories:

- E. Air nozzle: For quick drying in under 10 minutes.
- G. Round brush: Perfect for creating large waves.
- M. Brush: Smooths and detangles simultaneously.
- R. Right curler: Creates voluminous and natural curls.
- L. Left curler: Creates voluminous and natural curls.

How to Use the Hair Styler


Attaching Accessories: Align the accessory with the hair styler as shown. Make sure the groove on the accessory aligns with the hook on the appliance body. Insert the hair styler into the accessory, twist, and lock it in place.

- **ON/OFF Button:** Press the ON/OFF button to start.
- **Temperature and Speed Control:** Adjust to the desired intensity using the 1-2-3 heat settings.
- **Indicator for Temperature and Speed:**
 1. Low power, low temperature for gentle drying.
 2. Medium power, medium temperature for gentle drying and styling.
 3. Full power, high temperature for quick drying.

Use the high setting for drying hair and the low setting for styling. If the hair styler stops working for any reason, turn it off immediately and let it cool. Always ensure the switch is in the OFF position before connecting the appliance to the power outlet.

SORTING GUIDE:

Electrical and electronic equipment contains materials, components, and substances that can be hazardous and harmful to human health and the environment if waste from electrical and electronic equipment (WEEE) is not disposed of properly. Products labeled with the "crossed-out wheeled bin" are electrical and electronic equipment. The crossed-out wheeled bin symbol indicates that waste from electrical and electronic equipment must not be disposed of with unsorted household waste but must be collected separately. For this purpose, all municipalities have established collection schemes where waste from electrical and electronic equipment can be delivered free of charge by citizens at recycling stations or other collection points or picked up directly from households. Further information can be obtained from the municipality's technical administration.



Før du bruger denne hårstyler, læs venligst disse instruktioner grundigt og gem manualen til fremtidig brug. 220-240V ~50-60Hz 1200W KLASSE II

Sikkerhedsinstruktioner

Læs venligst sikkerhedsinstruktionerne, før du bruger denne hårstyler. Disse instruktioner er lavet for at sikre korrekt og sikker brug af hårstyleren og for at forhindre skader på dig selv eller andre.

ADVARSEL: Hvis instruktionerne nedenfor ikke følges, kan det medføre brand, forbrændinger, eksplosioner, kortslutning eller elektrisk stød.

Elektriske forhold

1. Brug ikke hårstyleren i nærheden af vand.



Dette symbol på apparatet betyder: "Brug ikke denne hårstyler i nærheden af badekar, bruser, vask eller andre beholdere med vand."

2. Sluk altid for hårstyleren ("OFF"-position), når den ikke er i brug, og før du trækker stikket ud af stikkontakten. Træk altid i selve stikket, ikke i ledningen, for at undgå brand og ulykker.
3. Kontrollér, at hårstylerens spænding svarer til den lokale spænding, inden den tilsluttes.
4. Modificer, beskadig eller bøj ikke ledningen unødigt, og placer ikke tunge genstande på den. Hvis ledningen bliver varm eller beskadiget, skal du straks stoppe brugen.
5. Når apparatet bruges i et badeværelse, skal du trække stikket ud efter brug, da nærheden af vand udgør en fare, selv når apparatet er slukket.
6. For ekstra sikkerhed anbefales det at installere en fejlstrømsafbryder (RCD) med en udløserstrøm på maks. 30 mA i badeværelsets el-kreds. Spørg en elektriker til råds.

Brug af hårstyleren

1. Stop straks brugen, hvis hårstyleren ikke producerer luft kontinuerligt, eller hvis ledningen/stikket er beskadiget eller bliver varmt.
2. Indsæt aldrig fremmedlegemer i luftindtagene eller -udtagene.
3. Brug ikke hårstyleren i nærheden af brændbare materialer som benzin, fortynder eller sprays.
4. Undgå at bruge hårstyleren med våde hænder eller i områder med høj luftfugtighed.
5. Denne enhed kan bruges af børn fra 8 år og opefter samt personer med nedsatte evner, hvis de har modtaget instruktion og forstår risiciene. Børn må ikke lege med apparatet. Rengøring og brugervedligeholdelse må ikke udføres af børn uden opsyn.

Reparation af hårstyleren

1. Forsøg aldrig selv at reparere, adskille eller modificere hårstyleren.
2. Hvis ledningen er beskadiget, skal den udskiftes af producenten, en autoriseret serviceagent eller en tilsvarende kvalificeret person.
3. Hvis stikket eller ledningen er beskadiget, skal du stoppe brugen og kontakte et autoriseret servicecenter.

Forsigtighed

1. Undgå at røre ved luftudtagene under og efter brug – de kan blive meget varme.
2. Brug kun hårstyleren til menneskehår. Brug den ikke på børn eller dyr.
3. Undgå at håret suges ind i luftindtagene.
4. Brug ikke opløsningsmidler som fortynder eller benzin til rengøring.
5. Apparatet er udstyret med overophedningsbeskyttelse, som aktiveres ved for høj varme. Sluk for apparatet, lad det afkøle, og fjern eventuelle blokeringer.
6. Risiko for forbrænding. Opbevar apparatet utilgængeligt for små børn, især under brug og mens det afkøles.
7. Efterlad aldrig apparatet uden opsyn, når det er tilsluttet strøm.
8. Anbring altid apparatet på en varmebestandig, stabil og plan overflade.


Vedligeholdelse

Rengør luftind- og -udtag mindst en gang om måneden for at undgå blokeringer. Sluk for apparatet og træk stikket ud, før du starter rengøringen.

Symbolforklaring

- V: Volt
- Hz: Hertz
- W: Watt
- ~: Vekselstrøm
- □: Klasse II-apparat

Identifikation af dele

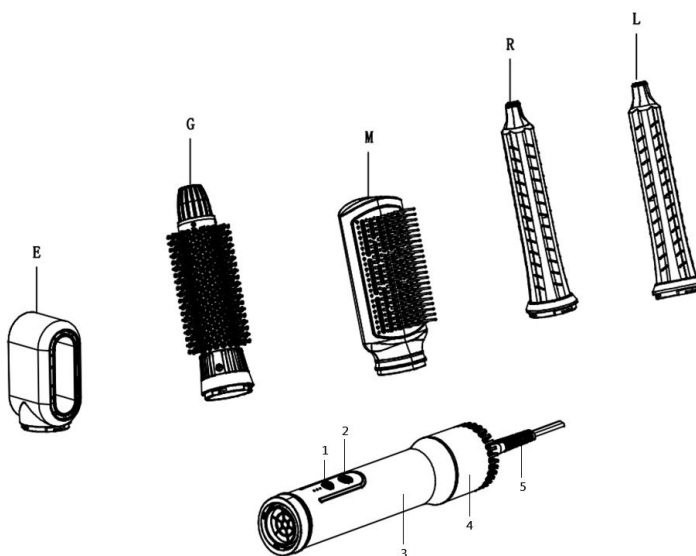

1. Temperatur- og hastighedsknap (1-2-3 varmeindstilling)
2. ON/OFF-KNAP
3. HANDTAG
4. Bagklips
5. Drejeledning

Tilbehør:

- E. Luftdyse
- G. Rund børste
- M. Børste
- R. Højre curler
- L. Venstre curler

Sådan bruges hårstyleren

- **Montering af tilbehør** Justér tilbehøret med hårstyleren som vist. Sørg for, at rillen i tilbehøret og kroge på kroppen er på linje. Indsæt hårstyleren i tilbehøret, drej og fastgør.
- **ON/OFF-KNAP:** Tryk på ON/OFF-knappen for at starte.
- **Temperatur- og hastighedskontrol:** Juster den ønskede styrke med 1-2-3 varmeindstilling.

Indikator for temperatur og hastighed:

1. Lav effekt, lav temperatur til skånsom tørring.
2. Halv effekt, medium temperatur til skånsom tørring og styling.
3. Fuldt effekt, høj temperatur til hurtig tørring.

Brug den høje indstilling til at tørre håret, og brug den lave indstilling til at style det. Hvis hårtørreren stopper med at virke af en eller anden grund, skal du straks slukke den og lade den køle af. Sørg altid for, at kontakten står på OFF-positionen, inden du tilslutter enheden til stikkontakten.

Gem emballagen, da den indeholder vigtig information. Produceret i Kina.

Elektrisk og elektronisk affald må IKKE bortskaffes sammen med husaffald, produktet skal indleveres på den lokale genbrugsplads.

Emballagen sorteres som: Pap

Produktet sorteres som: Småt elektronik

SORTERINGSVEJLEDNING

Elektrisk og elektronisk udstyr indeholder materialer, komponenter og stoffer, der kan være farlige og skadelige for menneskers sundhed og for miljøet, når affaldet af elektrisk og elektronisk udstyr (WEEE) ikke bortskaffes korrekt.

Produkter, der er mærket med "overkrydsede skraldespand", er elektrisk og elektronisk udstyr. Den krydsede skraldespand symboliserer, at affald af elektrisk og elektronisk udstyr ikke må bortskaffes sammen med usorteret husholdningsaffald, men skal indsamles særskilt.

Til dette formål har alle kommuner etableret indsamlingsordninger, hvor affald af elektrisk og elektronisk udstyr gratis kan afleveres af borgerne på genbrugsstationer eller andre indsamlingssteder eller hentes direkte fra husholdningerne. Nærmere information skal indhentes hos kommunens tekniske forvaltning

Produceret for og importeret af:

Stock Group A/S

Gammelmarksvej 11, DK- 7100 Vejle

www.stockgroup.dk

