


# Sobczyk

## INSTRUKTIONS MANUAL

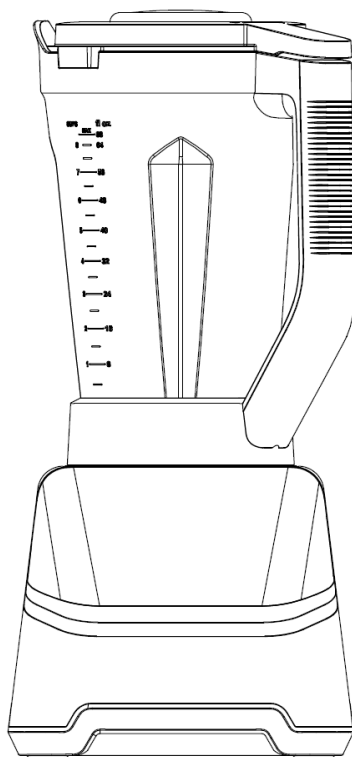

Model: CS-1560

Læs denne vejledning grundigt, før du tager apparatet i brug, og gem den til senere brug.

## **VIGTIGE SIKKERHEDSFORANSTALTNINGER**

Ved brug af dette elektriske apparat skal følgende grundlæggende sikkerhedsforanstaltninger overholdes:


1. Læs alle instruktioner.
2. Kontroller før brug, at spændingen svarer til den angivne spænding på apparatets typeskilt.
3. Lad ikke ledningen hænge ud over bord- eller bordkant.
4. Placer ikke apparatet på eller i nærheden af en varm gas- eller elkomfur eller i en opvarmet ovn.
5. Brug ikke apparatet, hvis ledningen eller stikket er beskadiget, eller hvis apparatet ikke fungerer korrekt eller på anden måde er beskadiget.  
Returnér apparatet til nærmeste autoriserede servicecenter til undersøgelse, reparation eller justering.
6. Hvis netledningen er beskadiget, skal den udskiftes af producenten, dennes serviceagent eller lignende kvalificeret personale for at undgå fare.
7. Tag altid blenderen ud af stikkontakten, hvis den efterlades uden opsyn, og før samling, adskillelse eller rengøring.
8. Sluk apparatet og træk stikket ud før udskiftning af tilbehør eller ved berøring af bevægelige dele under brug.
9. Undgå kontakt med bevægelige dele.
10. Efterlad ikke fremmedlegemer som skeer, gafler, knive eller målebæger i kanden, da dette kan beskadige knivene og andre komponenter ved opstart og forårsage personskade.

11. Vær forsigtig ved håndtering af skarpe knivblade, tømning af skålen og under rengøring.
12. Brug af tilbehør – herunder kande og låg – som ikke er anbefalet eller solgt af producenten, kan medføre brand, elektrisk stød eller personskade.
13. Brug aldrig apparatet uden indhold.
14. Vær forsigtig ved tømning af varm suppe fra kanden.
15. For at undgå elektrisk stød må motorenheden eller strømledningen ikke nedsænkes i vand eller anden væske.
16. Hold hænder og redskaber ude af kanden under blendning for at undgå alvorlig personskade eller skader på blenderen.
17. Hvis det er nødvendigt at skrabe indhold, skal strømmen slås fra, stikket trækkes ud, og der må kun anvendes en gummispatel.
18. Blenderen må kun anvendes med låget korrekt på plads.
19. Kom aldrig ikke-fødevarer i kanden til blendning.
20. Åbn ikke låget, før kniven er standset helt, for at undgå fare.
21. Stik ikke hænder eller andre genstande i kanden under brug.
22. Apparatet kan anvendes af personer med nedsatte fysiske, sensoriske eller mentale evner eller manglende erfaring og viden, hvis de har fået instruktion eller overvågning i sikker brug af apparatet og forstår de involverede risici.
23. Dette apparat må ikke bruges af børn. Hold apparatet og dets ledning uden for børns rækkevidde.


- 24. Børn må ikke lege med apparatet.
- 25. Børn må ikke bruge blenderen uden opsyn.
- 26. Forkert brug kan medføre risiko for personskade.
- 27. Må ikke anvendes udendørs.
- 28. Gem denne instruktion.

## KUN TIL HUSHOLDNINGSBRUG

### LÆR DIN BLENDER AT KENDE

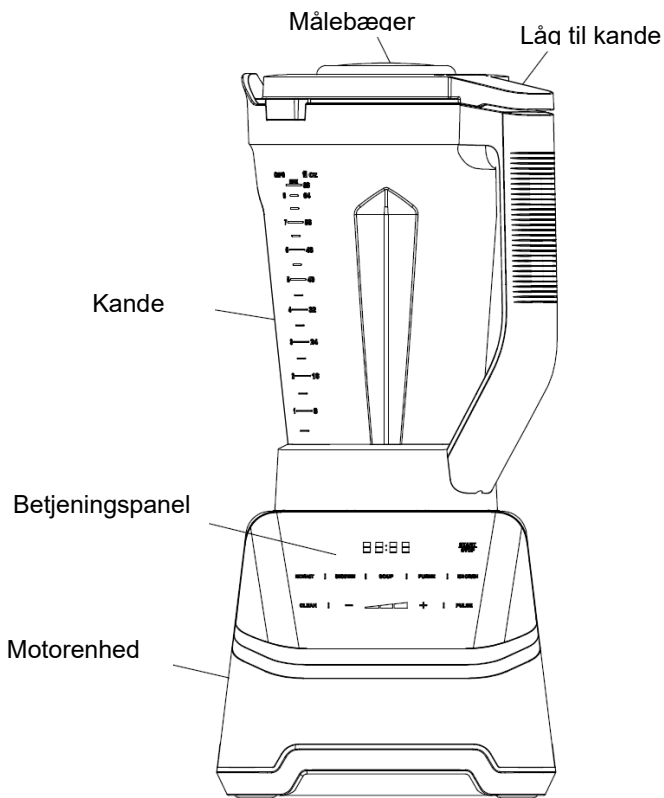

## BRUGERGRÆNSEFLADE

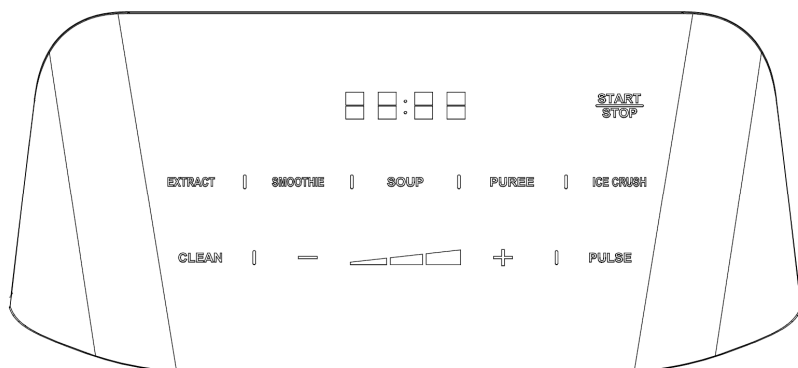

## BETJENING

1. Kom ingredienserne i henhold til opskriften i blenderkanden i den angivne rækkefølge. Sæt målebægeret på, luk låget, og tilslut blenderen til strømforsyning.
2. Når apparatet er tændt, lyser kontrolpanelet op og viser standardbrugerfladen til funktionsvalg. Tryk på "EXTRACT"-knappen og derefter på "START/STOP"-knappen. EXTRACT-programmet starter automatisk, og timeren på kontrolpanelet begynder at tælle, indtil blendingen er færdig. Når apparatet stopper, vender kontrolpanelet tilbage til funktionsvalg.
3. Under automatisk kørsel af programmet kan du trykke på "EXTRACT" eller "START/STOP" for at sætte programmet på pause eller afslutte det.

### Advarsel:

Låget og målebægeret skal være korrekt monteret og lukket, før blanding påbegyndes.

Apparatet skal være slukket, hvis du ønsker at tilsætte ingredienser under blanding.

Stik aldrig hænderne ned i blenderkanden, mens apparatet er tændt.

Opskrift	Ingredienser
Æblejuice	Et helt æble: 300 g Vand: 150 g Sukker: 15 g Citronsaft: 10 g

## SMOOTHIE

1. Kom ingredienserne i henhold til opskriften i blenderkanden i den angivne rækkefølge. Sæt målebægeret på, luk låget, og tilslut blenderen til strømforsyningen.
2. Når apparatet er tændt, lyser kontrolpanelet op og viser standardbrugerfladen til funktionsvalg. Tryk på knappen "SMOOTHIE" og derefter på "START/STOP"-knappen. SMOOTHIE-programmet starter automatisk, og timeren på kontrolpanelet begynder at tælle, indtil blendningen er færdig. Når apparatet stopper, vender kontrolpanelet tilbage til standardvisningen for funktionsvalg.
3. Under automatisk drift af blenderprogrammet kan du trykke på "SMOOTHIE" eller "START/STOP"-knappen for at pause eller afslutte programmet.

### Advarsel:

Låget og målebægeret skal være korrekt lukket, før blendning påbegyndes. Apparatet skal være slukket, hvis du ønsker at tilsætte ingredienser under blendning.

Stik aldrig hænderne ned i blenderkanden, mens blenderen er tændt.

Opskrift	Ingredienser
Banan-smoothie	Mælk: 650 g Banan: 350 g, skåret i 2 stykker Isterninger: 5 stk., størrelse: 20×20×20 mm Hvidt sukker: 15 g

## SUPPE

1. Kom ingredienserne i henhold til opskriften i blenderkanden i den angivne rækkefølge. Sæt målebægeret på, luk låget, og tilslut blenderen til strømforsyningen.
2. Når apparatet er tændt, lyser kontrolpanelet op og viser standardbrugerfladen til funktionsvalg. Tryk på knappen "SOUP", og derefter på "START/STOP"-knappen. SOUP-programmet starter automatisk, og timeren på kontrolpanelet begynder at tælle, indtil blendningen er færdig. Når apparatet stopper, vender kontrolpanelet tilbage til standardvisningen for funktionsvalg.
3. Under automatisk drift af blenderprogrammet kan du trykke på "SOUP" eller "START/STOP" for at pause eller afslutte det kørende program.

### Advarsel:

Den maksimale mængde til SUPPE-programmet er 1 liter.

Temperaturen på ingredienserne, der hældes i kanden, må ikke overstige 90 °C.

Låget og målebægeret skal være korrekt lukket, før blendning påbegyndes. Apparatet skal være slukket, hvis du ønsker at tilsætte ingredienser under blendning.

Stik aldrig hænderne ned i blenderkanden, mens blenderen er tændt.

Opskrift	Ingredienser
Tomatsuppe	Tomat: 750 g Rød chili: 135 g Cashewnødder: 90 g Basilikumblade: 6 stk. Salt: 1 g Peber: 0,5 g

## PURÉ

1. Kom ingredienserne fra opskriften i blenderkanden i den angivne rækkefølge. Monter målebægeret, luk låget, og tilslut blenderen til strømforsyningen.
2. Når apparatet er tændt, lyser kontrolpanelet op og viser standardbrugerfladen til funktionsvalg. Tryk på knappen "PURÉ", og derefter på "START/STOP"-knappen. PURÉ-programmet starter automatisk, og timeren på kontrolpanelet begynder at tælle, indtil blendningen er færdig. Når apparatet stopper, vender kontrolpanelet tilbage til standardvisningen for funktionsvalg.
3. Under den automatiske drift af programmet kan du trykke på "PURÉ" eller "START/STOP"-knappen for at sætte programmet på pause eller afslutte det.

### Advarsel:

Låget og målebægeret skal være korrekt lukket, før blendning påbegyndes. Apparatet skal slukkes, hvis du ønsker at tilsætte ingredienser under blendning. Stik aldrig hænderne ned i blenderkanden, mens blenderen er tændt.

Opskrift	Ingrediens
Tomat Puré	Tomat 1000g

## KNUSNING AF IS

1. Kom ingredienserne fra opskriften i blenderkanden i den angivne rækkefølge. Monter målebægeret, luk låget, og tilslut blenderen til strømforsyningen.
2. Når apparatet tændes, lyser kontrolpanelet op og viser standardbrugerfladen til funktionsvalg. Tryk på knappen "ICE CRUSH", og derefter på "START/STOP"-knappen. ICE CRUSH-programmet starter automatisk, og timeren på kontrolpanelet begynder at tælle, indtil blendningen er færdig. Når apparatet stopper, vender kontrolpanelet tilbage til standardvisningen for funktionsvalg.
3. Under den automatiske drift af programmet kan du trykke på "ICE CRUSH" eller "START/STOP"-knappen for at sætte programmet på pause eller afslutte det.

### Advarsel:

Låget og målebægeret skal være korrekt lukket, før blendning påbegyndes. Apparatet skal være slukket, hvis du ønsker at tilsætte ingredienser under blendning.

Stik aldrig hænderne ned i blenderkanden, mens blenderen er tændt.

Opskrift	Ingrediens
Knusning af is	Isknusningskapacitet: mindre end 400 g Isstørrelse: mindre end 45×45×45 mm Opbevaring af is: Dybfrossen ved -18 °C

## RENGØRING

1. Tilsæt 700 ml vand og 2 dråber rengøringsmiddel, monter målebægeret, luk låget, og tilslut blenderen til strømforsyningen.
2. Når apparatet tændes, lyser kontrolpanelet op og går ind i standardbrugerfladen for funktionsvalg. Tryk på knappen "CLEAN" og derefter på "START/STOP"-knappen. CLEAN-programmet starter automatisk, og timeren på kontrolpanelet begynder at tælle, indtil rengøringsprogrammet er afsluttet. Når apparatet stopper, vender kontrolpanelet tilbage til standardvisningen for funktionsvalg.
3. Under den automatiske kørsel af programmet kan du trykke på "CLEAN" eller "START/STOP"-knappen for at pause eller afslutte programmet.

### Advarsel:

Låget og målebægeret skal være korrekt lukket, før rengøringen påbegyndes. Apparatet skal være slukket, hvis du ønsker at tilsætte noget under rengøring. Stik aldrig hænderne ned i blenderkanden, mens blenderen er tændt.

## PULSE

“PULSE”-tilstand bruges til at bearbejde mad ved den højeste hastighed. Du kan aktivere “PULSE”-tilstanden efter behov. Hold “PULSE”-knappen nede for at lade apparatet køre og bearbejde ingredienserne. For at stoppe apparatet, slip “PULSE”-knappen.

## TRINLØS HASTIGHEDSREGULERING

1. Hæld de tilberedte ingredienser fra opskriften i blenderkanden, monter målebægeret, luk låget, og tilslut blenderen til strømforsyningen.
2. Når apparatet tændes, lyser kontrolpanelet op og går ind i standardbrugerfladen for funktionsvalg. Tryk på knappen "+" eller "-" efter ønske – den valgte hastighed vises på panelet – og tryk derefter på "START/STOP"-knappen. Blenderen starter automatisk, og timeren viser blendetiden løbende. Når det ønskede resultat er opnået, tryk på "START/STOP" for at afslutte programmet og vende tilbage til funktionsvalg.

Bemærk: Når den enkelte driftstid overstiger 3 minutter og 30 sekunder, stopper motoren automatisk og går i selvbeskyttelsestilstand. For at genstarte apparatet skal det tilsluttes strøm igen.

### Advarsel:

Den maksimale blendemængde for SUPPE-programmet er 1 liter. Temperaturen på ingredienserne, der hældes i kanden, må ikke overstige 90 °C. Låget og målebægeret skal være korrekt lukket, før blendning påbegyndes. Apparatet skal slukkes, hvis du ønsker at tilsætte ingredienser under blendning. Stik aldrig hænderne ned i blenderkanden, mens blenderen er tændt.

Opskrift	Ingredienser	Tid
Gulerodsjuice	Gulerod:800g Vand: 1200 g	1 minut

Blendingshastighedsikon “”

Blendingshastighedsikonet “” viser visuelt motorens omdrejningshastighed.

Når fremdriftsindikatoren lyser med 1 bjælke, betyder det, at motoren kører under belastning i lav hastighed.

Når fremdriftsindikatoren lyser med 2 bjælker, betyder det, at motoren kører under belastning i middel hastighed.

Når fremdriftsindikatoren lyser med 3 bjælker, betyder det, at motoren kører under belastning i høj hastighed.

Når fremdriftsindikatoren lyser i cyklisk rækkefølge med 1 bjælke, 1+2 bjælker, 1+2+3 bjælker, betyder det, at motoren kører under ultralav hastighed og indikerer behov for passende acceleration.

## RENGØRING OG VEDLIGEHOLDELSE

**BEMÆRK:** Sørg for, at apparatet er taget ud af stikkontakten, før det rengøres.

1. For nem og hurtig rengøring af blender og knivenhed på en helt sikker måde, følg trinnene (1)–(2) nedenfor:
  - (1) Efter brug, saml kanden igen og hæld ca. 400–500 ml varmt vand i den.
  - (2) Træk stikket ud, og fjern derefter kanden fra motorenheden. Skyl derefter kanden under rindende vand.
2. Tør ydersiden af motorenheden af med en fugtig klud. Brug ikke slibende rengøringsmidler. Nedsænk aldrig motorenheden i vand eller anden væske under rengøring.
3. Alle dele undtagen motorenheden tåler opvaskemaskine. Du kan også vaske delene (bortset fra motorenheden) i varmt sæbevand.
4. Tør alle dele grundigt, og saml dem derefter igen. Opbevar dog apparatet med låget til kanden let åbent for at tillade luftcirkulation og forhindre lugt i kanden.
5. Hvis der opstår problemer under brug, må du aldrig forsøge at skille motorenheden ad selv – der er ingen bruger-servicérbare dele indeni. Kontakt udelukkende et autoriseret servicecenter for inspektion og reparation.

**ADVARSEL:**

- (1) Kniven er meget skarp – håndter den forsigtigt under rengøring.
- (2) Brug ikke slibende rengøringsmidler. Nedsænk aldrig motorenheden i vand under rengøring.


## MILJØVENLIG BORTSKAFFELSE



Du kan hjælpe med at beskytte miljøet!  
Husk at overholde de lokale regler: aflever elektrisk udstyr, der ikke virker, på en godkendt genbrugsstation.

# Sobczyk

## INSTRUCTION MANUAL

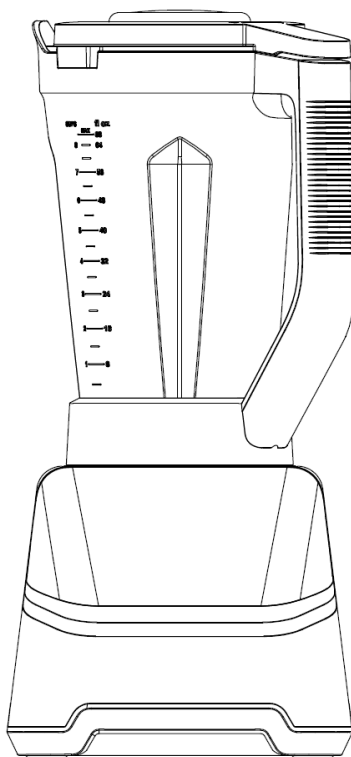

Model: CS-1560

Read this booklet thoroughly before using and save it for future reference

## **IMPORTANT SAFEGUARDS**

When using the electrical appliance, the below basic safety precautions must be followed:


1. Read all instructions.
2. Before using, check and make sure that the voltage power corresponds to the one shown on the appliance nameplate.
3. Do not let cord hang over edge of table or counter.
4. Do not place on or near a hot gas or electric burner, or in a heated oven.
5. Do not operate any appliance with a damaged cord or plug or after the appliance malfunction or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
6. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
7. Always disconnect the blender from the supply if it is left unattended and before assembling, disassembling or cleaning.
8. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
9. Avoid contacting moving parts.
10. Do not leave foreign objects, such as spoons, forks, knives or the measuring cup, in the jar as this will damage the blades and other components when starting the machine and may cause injury.
11. Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.

12. The use of attachment, including jar, jar lid, not recommended or sold by manufacturer may cause fire, electric shock or injury.
13. Never run the appliance empty.
14. Please be careful when empty the hot soup in the jar.
15. To protect against risk of electrical shock do not put motor unit or power cord in water or other liquid.
16. Keep hands and utensils out of jar while blending to reduce the risk of severe injury to persons or damage to the blender.
17. If scraping is necessary, turn the power OFF, unplug from the electrical outlet, and use a rubber spatula only.
18. Always operate blender with lid in place.
19. Never put non-food items into the jar for blending.
20. Do not open the lid before the blade stops running completely to avoid hazard.
21. Do not put hands or other objects into jar during working.
22. Appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
23. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
24. Children shall not play with the appliance.
25. Do not allow children to use the blender without supervision.


- 26. Misuse may cause potential injury.
- 27. Do not use outdoors.
- 28. Save this instruction.

HOUSEHOLD USE ONLY

KNOW YOUR BLENDER

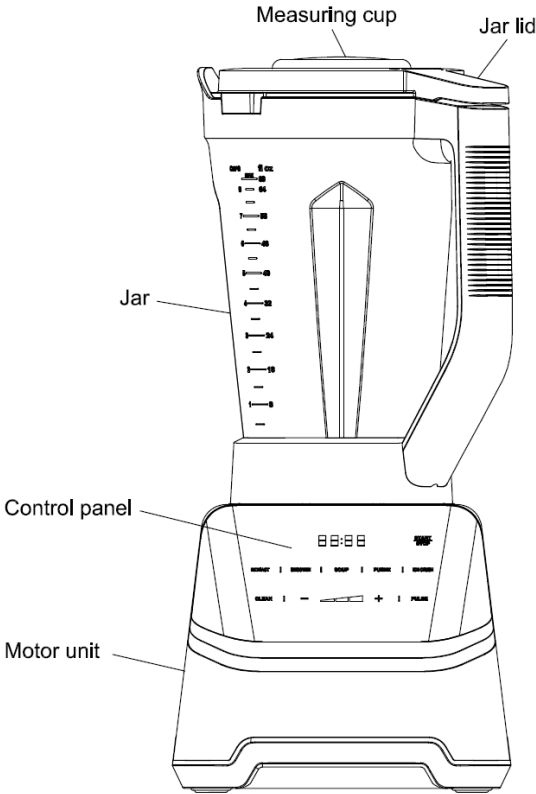

# USER INTERFACE

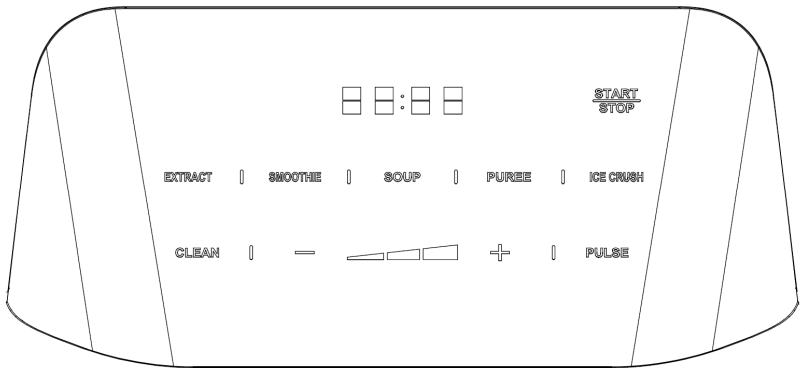

## FOR THE INITIAL USE

1. Unpack the appliance and place all parts on a horizontal surface.
2. Immerse the jar, jar lid and measuring cup in warm soapy water and then rinse them and dry. Never immerse motor unit in water for cleaning to prevent the risk of electric shock.

**CAUTION:** The blade is very sharp, please handle carefully.

## OPERATION

### EXTRACT (juice blending)

1. Put the ingredients in the recipe into the blending jar in sequence, install the measuring cup, cover the jar lid, and connect the blender to power supply.
2. After powered on, the control panel lights up to enter the default interface for function selection. Press the "EXTRACT" button, and then the "START/STOP" button. The EXTRACT program will automatically run, and the timer on the control panel will start counting until the blending is completed. After the appliance is stopped, the control panel will enter the default interface for function selection again.
3. During the automatic operation of the blending program, pressing the "EXTRACT" or "START/STOP" button can pause or end the running program.

**Warning:** The jar lid and measuring cup must be closed properly before blending. The appliance should be stopped if you want to add ingredients during blending. Never extend your hands in the blending jar when the blender is powered on.

Recipe	Ingredient
Apple Juice	A Full apple: 300g Water: 150g Sugar: 15g Lemon juice: 10g

## SMOOTHIE

1. Put the ingredients in the recipe into the blending jar in sequence, install the measuring cup, cover the jar lid, and connect the blender to power supply.
2. After powered on, the control panel lights up to enter the default interface for function selection. Press the " SMOOTHIE " button, and then the "START/STOP" button. The SMOOTHIE program will automatically run, and the timer on the control panel will start counting until the blending is completed. After the appliance is stopped, the control panel will enter the default interface for function selection again.
3. During the automatic operation of the blending program, pressing the " SMOOTHIE " or "START/STOP" button can pause or end the running program.

Warning: The jar lid and measuring cup must be closed properly before blending. The appliance should be stopped if you want to add ingredients during blending. Never extend your hands in the blending jar when the blender is powered on.

Recipe	Ingredient
Banana smoothie	Milk: 650g Banana: 350g, cut into 2 pieces Ice cube: 5 pieces, size: 20×20×20mm White sugar: 15g

## SOUP

1. Put the ingredients in the recipe into the blending jar in sequence, install the measuring cup, cover the jar lid, and connect the blender to power supply.
2. After powered on, the control panel lights up to enter the default interface for function selection. Press the " SOUP " button, and then the "START/STOP" button. The SOUP program will automatically run, and the timer on the control panel will start counting until the blending is completed.

After the appliance is stopped, the control panel will enter the default interface for function selection again.

3. During the automatic operation of the blending program, pressing the "SOUP " or "START/STOP" button can pause or end the running program.

Warning: The maximum blending amount of SOUP program is 1L;  
 The temperature of the ingredients poured into the jar should not exceed 90°C;  
 The jar lid and measuring cup must be closed properly before blending.  
 The appliance should be stopped if you want to add ingredients during blending.  
 Never extend your hands in the blending jar when the blender is powered on.

Recipe	Ingredient
Tomato soup	Tomato: 750g Red chilli: 135g Cashew nut: 90g Basil leaves: 6pcs Salt: 1g Pepper: 0.5g

### **PUREE (Jam)**

1. Put the ingredients in the recipe into the blending jar in sequence, install the measuring cup, cover the jar lid, and connect the blender to power supply.
2. After powered on, the control panel lights up to enter the default interface for function selection. Press the " PUREE " button, and then the "START/STOP" button. The PUREE program will automatically run, and the timer on the control panel will start counting until the blending is completed. After the appliance is stopped, the control panel will enter the default interface for function selection again.
3. During the automatic operation of the blending program, pressing the " PUREE " or "START/STOP" button can pause or end the running program.

Warning: The jar lid and measuring cup must be closed properly before blending.  
 The appliance should be stopped if you want to add ingredients during blending.  
 Never extend your hands in the blending jar when the blender is powered on.

Recipe	Ingredient
Tomato butter	Tomato 1000g

## ICE CRUSH

1. Put the ingredients in the recipe into the blending jar in sequence, install the measuring cup, cover the jar lid, and connect the blender to power supply.
2. After powered on, the control panel lights up to enter the default interface for function selection. Press the " ICE CRUSH " button, and then the "START/STOP" button. The ICE CRUSH program will automatically run, and the timer on the control panel will start counting until the blending is completed. After the appliance is stopped, the control panel will enter the default interface for function selection again.
3. During the automatic operation of the blending program, pressing the " ICE CRUSH " or "START/STOP" button can pause or end the running program.

Warning: The jar lid and measuring cup must be closed properly before blending. The appliance should be stopped if you want to add ingredients during blending. Never extend your hands in the blending jar when the blender is powered on.

Recipe	Ingredient
Ice crush	Ice crushing capacity: less than 400g, Ice size: smaller than 45*45*45mm Ice storage: Deeply freeze at -18 °C

## CLEAN

1. Add 700mL water and 2 drops of cleaning agent, install the measuring cup, cover the jar lid, and connect the blender to power supply.
2. After powered on, the control panel lights up to enter the default interface for function selection. Press the " CLEAN " button, and then the "START/STOP" button. The CLEAN program will automatically run, and the timer on the control panel will start counting until the blending is completed. After the appliance is stopped, the control panel will enter the default interface for function selection again.
3. During the automatic operation of the blending program, pressing the " CLEAN " or "START/STOP" button can pause or end the running program.

Warning: The jar lid and measuring cup must be closed properly before blending.

The appliance should be stopped if you want to add ingredients during blending. Never extend your hands in the blending jar when the blender is powered on.

### PULSE

"PULSE" mode is used for processing food at the highest speed. You can activate the "PULSE" mode as required. Hold and press "PULSE" button to make the appliance keep processing food. To make the appliance stop working, release "PULSE" button.

## STEPLESS SPEED

1. Pour the ingredients in the recipe into the blending jar after cooking, install the measuring cup, cover the jar lid, and connect the blender to power supply.
2. After powered on, the control panel lights up to enter the default interface for function selection. Press the "+" or "-" button as wanted, the speed setting will be shown on the panel, and then the "START/STOP" button. The blender starts automatically, and the timer shows the blending time sequentially. After the desired blending effect is reached, press "START/STOP" to end the running program and re-enter the function selection interface.

Note: When the single operation time exceeds 3 minutes and 30 seconds, the motor will automatically stop working and enter the self-protection mode, and it needs to be re-powered on when it starts running again.

Warning: The maximum blending amount of SOUP program is 1L;

The temperature of the ingredients poured into the jar should not exceed 90°C;

The jar lid and measuring cup must be closed properly before blending.

The appliance should be stopped if you want to add ingredients during blending.

Never extend your hands in the blending jar when the blender is powered on.

Recipe	Ingredient	Elapsed Time
Carrot Juice	Carrot 800g Water 1200g	1 Minute

Blending speed icon "■ ■ ■ ■"

The blending speed icon "■ ■ ■ ■" shows the motor rotation visually.

When the progress bar lights up 1 bar, it means that the motor is running under load in the low- speed range

When the progress bar lights up 2 bars, it means that the motor is running under load in the middle-speed range

When the progress bar lights up 3 bars, it means that the motor is running under load in the high-speed range

When the progress bar illuminates in the cyclic order of 1 bar, 1+2 bars, 1+2+3 bars, it means that the motor is running under ultra-low speed range, indicating the need for appropriate acceleration.

## CLEANING AND MAINTENANCE

NOTE: Before cleaning, make sure the appliance is unplugged.

1. To clean the blender and blade assembly easily and rapidly in complete safety. Follow the operation of (1)-(2) as below to perform cleaning.

- (1) After use, reassemble the jar and pour about 400-500ml warm water into it.
- (2) Unplug the appliance and then remove the jar from the motor unit, then rinse the jar under running water.
2. Wiping the outer surface of motor unit with a damp cloth, do not use abrasive cleansers. Never immerse it in water or other solution for cleaning.
3. All parts except the motor unit are dishwasher-safe. You can also wash the parts, except the motor unit, in warm, soapy water.
4. Dry all parts and then reassemble them again. But store the appliance with the jar lid not be closed completely to allow air to circulate and prevent jar odors.
5. If any problem has been encountered during use, never disassemble the Motor Unit by yourself, there are no user serviceable parts inside. Contact only the authorized service facility for examination and repair.

**WARNING:**

- (1) The blade is very sharp, handle carefully when clean.
- (2) Do not use abrasive cleaners. Never immerse the Motor Unit in water for cleaning.

## **ENVIRONMENT FRIENDLY DISPOSAL**



You can help protect the environment!  
Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal centre.