

MASSAGE PRO

Dybdegående Fodmassage

Brugermanual MP-3440



Bemærk

Behold denne vejledning til fremtidig brug.


- Læs betjeningsvejledningen, inden produktet tages i brug.
- Lad ikke børn betjene produktet. Opbevares utilgængeligt for børn.
- Tæt opsyn er nødvendigt, når produktet anvendes i nærheden af børn.
- Kun til indendørs brug i private hjem.
- Produktet er ikke beregnet som medicinsk behandling eller til selvdiagnose.
- Produktet slukker automatisk efter 15 minutter.
- Kontrollér, at strømkablets spændingsangivelse passer til din stikkontakt.
- Tag stikket ud, hvis produktet efterlades uden opsyn, og før adskillelse eller rengøring.
- Rådfør dig med læge før brug, hvis du har: kræft, knogleskørhed, høj feber, nedsat bevidsthed, diabetes, erytem, epilepsi, ondartede tumorer, aktiv tuberkulose, svær hjertesvigt, blødningsforstyrrelser, mulig graviditet eller allergisk disposition.
- Brug ikke produktet sammen med følgende elektroniske medicinske enheder: pacemakere, respiratorer, EKG-scannere og andre implanterede enheder.
- Dette produkt er ikke beregnet til brug af personer (herunder børn) med nedsatte fysiske, sensoriske eller mentale evner eller manglende erfaring, medmindre de er under opsyn eller har modtaget instruktion i brugen af produktet af en person, der er ansvarlig for deres sikkerhed.
- Hvis dele mangler, er gået i stykker, beskadiget eller slidt, må produktet ikke længere bruges.

Advarsel


- Efterlad ikke produktet uden opsyn, når stikket sidder i.
- Stå ikke på eller i massageapparatet – brug kun produktet, mens du sidder ned.
- Hold produktet væk fra direkte sollys og andre varmekilder (komfur, varmeapparat osv.).
- Får ikke strømkablet over skarpe kanter, hjørner eller varme overflader.
- Vær opmærksom på opvarmede overflader, da de kan forårsage forbrændinger. Brug ikke varmfunktionen på hudområder med nedsat følsomhed eller hvis du har dårligt blodomløb.
- Vær opmærksom på børn og personer med nedsat funktionsevne, når de er i nærheden af opvarmede overflader.
- Brug ikke massageapparatet i dårligt ventilerede områder såsom under dyner, tæpper eller puder, da det kan medføre brand, overophedning af produktet, elektrisk stød eller anden skade.
- Anvend ikke produktet med tildækkede luftåbninger. Hold luftåbninger fri for frug, hår mv.
- Nedsæk ikke produktet i vand, og opbevar det ikke i våde eller fugtige omgivelser.
- Spild ikke vand på de elektriske komponenter eller stik.
- Anvend ikke produktet med våde hænder.
- Brug ikke produktet i meget fugtige eller støvede omgivelser.
- Brug ikke produktet, hvor der anvendes aerosolspray, eller hvor der gives ilt.
- Brug ikke produktet i rum med en temperatur over 40 °C (104 °F).
- Brug ikke produktet, hvis du er under medicinsk behandling eller føler dig utilpas.
- Brug ikke produktet i timen før eller efter et måltid.
- Brug ikke produktet i mere end 30 minutter ad gangen.
- Brug ikke produktet, hvis du er beruset eller på anden måde påvirket.
- Brug ikke produktet med våde fødder eller mens du sover.
- Brug ikke produktet som trinbræt.

- Stik ikke genstande ind i produktets åbninger.
- Tab ikke produktet – det kan beskadige det.
- Træk ikke stikket ud i ledningen. Tag altid fat om selve stikket og træk det lige ud af kontakten.
- Træk eller bær ikke produktet i strømkablet.
- Brug ikke produktet, hvis stik, ledning eller andre dele er beskadiget.
- Brug ikke andet tilbehør end originalt tilbehør.
- Brug ikke produktet, hvis det fejler eller fungerer unormalt.
- For at mindske risikoen for elektrisk stød skal produktet altid slukkes og stikket tages ud umiddelbart efter brug og før rengøring.

Medfølgende dele

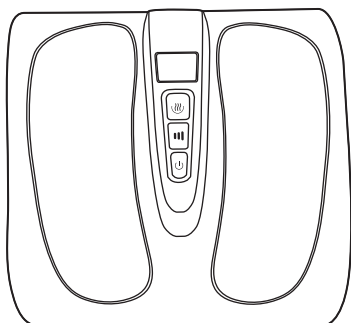

Massageenhed

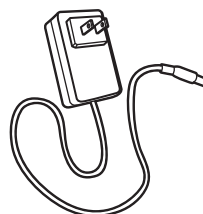

Strømadapter


Specifikationer

Spændingsindgang	Udgangsspænding	Effekt	Driftstid
AC 100–240 V / 50–60 Hz	12 V DC / 3A	36 W	15 minutter (automatisk)

Vedligeholdelse og opbevaring

- Tag straks stikket ud efter brug og inden rengøring.
- Brug ikke slibende rengøringsmidler eller skrappe kemikalier til rengøring af produktet.
- Anvend en tør klud til rengøring.
- Opbevar produktet et tørt og støvfrit sted. Opbevar ikke produktet med strømkablet udrullet.
- Opbevar ikke produktet i direkte sollys, nær åben ild eller i kraftig varme

Oversigt

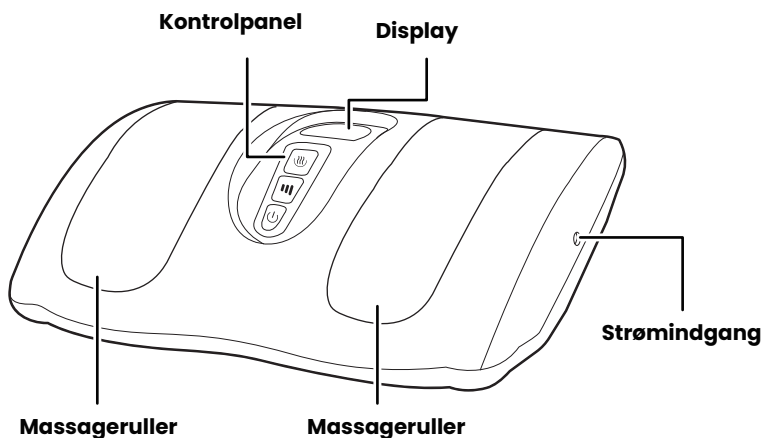

Kontrolpanel



Varmeknap

Tryk for at tænde og slukke varmfunktionen. Massagerullerne lyser røde.

- H0 = Slukket
- H1 = Lav varme
- H2 = Høj varme



Hastighedsknap

Tryk for at skifte mellem lav, mellem og høj hastighed.

- L1 = Lav
- L2 = Mellem
- L3 = Høj



Tænd/sluk-knap

Tryk for at tænde eller slukke produktet.

1. tryk: Tænder for massageapparatet og aktiverer auto-tilstand (F1).
2. tryk: Aktiverer shiatsu-tilstand med uret (F2).
3. tryk: Aktiverer shiatsu-tilstand mod uret (F3).
4. tryk: Slukker massageapparatet.

Fejlfinding

Spændingsindgang	Løsning
Raslende eller summende lyd under brug.	• Det er en normal lyd, der kommer fra rullernes bevægelse.
Massageapparatet slukker pludselig.	• Apparatet har været i brug i 15 minutter og er slukket automatisk. • Tryk på tænd/sluk-knappen igen for at starte apparatet. • Apparatet er koblet fra strømforsyningen – slut det til igen.
Massageapparatet starter ikke.	• Apparatet kan være overophedet efter længere tids brug – lad det køle af i 15 minutter. Tiden kan variere i varmere klimaer. • Kontrollér, at stikkontakten fungerer. • Kontrollér, at adapteren er sat i massageapparatet

SORTERINGSVEJLEDNING

Elektrisk og elektronisk udstyr indeholder materialer, komponenter og stoffer, der kan være farlige og skadelige for menneskers sundhed og for miljøet, når affaldet af elektrisk og elektronisk udstyr (WEEE) ikke bortskaffes korrekt. Produkter, der er mærket med "overkrydsede skraldespand", er elektrisk og elektronisk udstyr. Den krydsede skraldespand symboliserer, at affald af elektrisk og elektronisk udstyr ikke må bortskaffes sammen med usorteret husholdningsaffald, men skal indsamles særskilt. Til dette formål har alle kommuner etableret indsamlingsordninger, hvor affald af elektrisk og elektronisk udstyr gratis kan afleveres af borgerne på genbrugsstationer eller andre indsamlingssteder eller hentes direkte fra husholdningerne. Nærmere information skal indhentes hos kommunens tekniske forvaltning.

Fremstillet for og importeret af:

Stock Group A/S Gammelmarksvej 11

DK- 7100 Vejle

www.stockgroup.dk



MASSAGE PRO

Deep Tissue Foot Massager

User Manual MP-3440



Notice

Please retain these instructions for future reference.


- Read the operation instructions before using this product.
- Do not allow children to operate this product. Keep out of reach of children.
- Close supervision is necessary when this product is used near children.
- For household, indoor use only.
- This product is not for use as a personal medical treatment or self-diagnosis device.
- This product switches off automatically after 15 minutes.
- Make sure the voltage on the power cord is compatible with your power outlet.
- Unplug this product if left unattended and before disassembly or cleaning.
- Consult a physician before use if you have cancer, osteoporosis, high fever, impaired consciousness, diabetes, erythema, epilepsy, malignant tumors, active tuberculosis, severe cardiac dysfunction, bleeding disorders, possible pregnancy or allergic constitution.
- Do not use this product in conjunction with the following electronic medical devices: cardiac pacemakers, respiratory equipment, ECG scanners, and other implanted devices.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience, unless they have been given supervision or instruction concerning use of this product by a person responsible for their safety.
- If any parts are missing, broken, damaged or worn, stop using this product.

Warning


- Do not leave this product unattended when plugged in.
- Do not stand on or in the massager – only use it while seated.
- Keep this product out of direct sunlight and away from other sources of heat (stove, heater, etc.).
- Do not run the power cord over sharp edges, corners or hot surfaces.
- Be aware that heated surfaces may cause burns. Do not apply heat to insensitive skin areas or if you have poor circulation.
- Be aware of children or incapacitated persons in the proximity of heated surfaces.
- Do not use this massage device in a poorly ventilated area, such as under covers, blankets or pillows, as this can potentially cause fire, overheating, electric shock or other injury.
- Do not operate the product with the air openings blocked. Keep air openings free of lint, hair, etc.
- Do not immerse this product in water or store it in wet or humid areas.
- Do not spill water on the electrical components or connectors.
- Do not operate with wet hands.
- Do not use this product in an excessively humid or dusty environment.
- Do not use this product where aerosol spray products are being used or where oxygen is being administered.
- Do not use this product in a room whose temperature exceeds 40 °C (104 °F).
- Do not use this product if you are receiving medical treatment or feel unwell.
- Do not use this product within one hour before or after eating.
- Do not use this product for longer than 30 minutes at a time.
- Do not use this product while inebriated or otherwise impaired.
- Do not use this product with wet feet or while sleeping.

- Do not use this product as a step stool.
- Do not insert any object into any opening of this product.
- Do not drop the product as this may damage it.
- Do not unplug this product by pulling on the power cord. Always grasp the plug firmly and pull it straight out from the outlet.
- Do not pull or carry this product by the power cord.
- Do not use the product if the plug, power cord or any components are damaged.
- Do not use any accessory other than original accessories and attachments.
- Do not use the product if it is malfunctioning or operating abnormally.
- To reduce the risk of electric shock, immediately turn off and unplug the product after operation and before cleaning.

Included

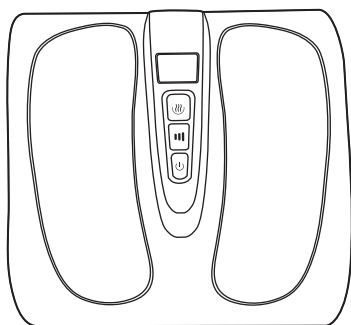

MASSAGER UNIT

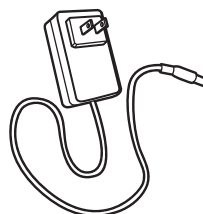

ADAPTER


Specifications

Voltage Input	Voltage Output	Power	Run Time
AC 100-240 V / 50-60 Hz	12 V DC / 3 A	36 W	15 minutes (automatic)

Care and Storage

- Immediately unplug the product after operation and before cleaning.
- Do not use any abrasive or harsh chemicals to clean this product.
- Use a dry cloth when cleaning this product.
- Store this product in a dry, dust-free location. Do not store the product with the power cord uncoiled.
- Do not store this product in direct sunlight, near an open flame, or in intense heat.

Diagram

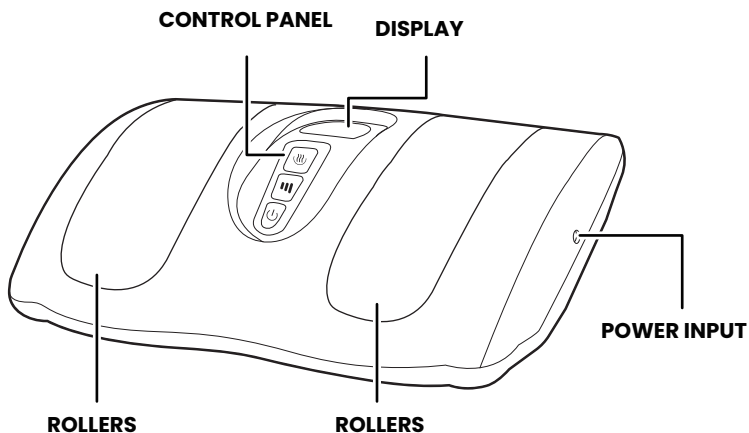

Control Panel



Heat Button

Press to turn the heating function on or off. The massage rollers turn red.

- H0 = Off
- H1 = Low heat
- H2 = High heat



Speed Button

Press to cycle between low, medium and high speed.

- L1 = Low
- L2 = Medium
- L3 = High



Power Button

Press to turn the product on or off.

- 1st press: Turn on the massager and activate auto mode (F1).
- 2nd press: Activate shiatsu mode clockwise (F2).
- 3rd press: Activate shiatsu mode counter-clockwise (F3).
- 4th press: Turn off the massager.

Troubleshooting

Issue	Solution
Clattering or humming sound during operation.	This is a normal sound caused by the oscillation of the rollers.
The massage unit suddenly turns off.	- The unit has been in use for 15 minutes and has shut off automatically. - Press the power button again to reactivate the unit. - The unit has been disconnected from the power supply – reconnect it.
The massage unit fails to start.	- The device may overheat after extended use – allow 15 minutes to cool. This may vary in warmer climates. - Check that the wall socket is functioning. - Check that the adapter is plugged into the massage unit.

SORTING GUIDE

Electrical and electronic equipment contains materials, components, and substances that can be hazardous and harmful to human health and the environment if waste from electrical and electronic equipment (WEEE) is not disposed of properly. Products labeled with the "crossed-out wheeled bin" are electrical and electronic equipment. The crossed-out wheeled bin symbol indicates that waste from electrical and electronic equipment must not be disposed of with unsorted household waste but must be collected separately. For this purpose, all municipalities have established collection schemes where waste from electrical and electronic equipment can be delivered free of charge by citizens at recycling stations or other collection points or picked up directly from households. Further information can be obtained from the municipality's technical administration.

Manufactured for and imported by:

Stock Group A/S

Gammelmarksvej 11

DK- 7100 Vejle

www.stockgroup.dk



