SCANDINAVIAN
COLLECTION

LUFTRENSER

SC-3815



DK

Vigtige sikkerhedsinstruktioner

Læs denne brugermanual grundigt før brug, og gem den til senere reference. Brug kun produktet som beskrevet i denne manual og til dets tilsigtede formål. Forkert brug kan medføre skade på produktet, personskade eller materielle skader.


- Kun til indendørs brug. Brug ikke luftrenseren udendørs.
- Bloker ikke luftudgange eller luftindtag.
- Stik aldrig fremmedlegemer ind i åbningerne, da det kan forårsage elektrisk stød eller beskadige luftrenseren.
- Brug ikke luftrenseren uden filter.
- Luftrenseren skal anvendes i lodret position.
- Placer luftrenseren et sted, hvor den ikke nemt kan vælte, og hvor husstandens medlemmer ikke kommer til at støde til den.
- Sørg for, at der ikke er brandfarlige materialer i nærheden af produktet under brug. Brug ikke luftrenseren, hvor der er brændbare gasser eller dampe til stede.
- Håndtér produktet forsigtigt. Undgå at tabe det eller udsætte det for direkte sollys, høje temperaturer eller høj luftfugtighed.
- Nedsænk ikke produktet i vand eller andre væsker.
- For at undgå skader skal produktet kun transporteres i den originale emballage.
- Brug ikke produktet, hvis det er defekt. Forsøg ikke selv at reparere det. Reparation må kun udføres af en autoriseret forhandler eller en kvalificeret fagperson.
- De indbyggede LED'er kan ikke udskiftes.
- Dette apparat kan bruges af børn fra 8 år og opefter samt personer med nedsatte fysiske, sensoriske eller mentale evner eller manglende erfaring og viden, hvis de er under opsyn eller har modtaget instruktion i sikker brug af apparatet og forstår de involverede risici.
- Børn må ikke lege med dette produkt.
- Rengøring og vedligeholdelse må ikke udføres af børn uden voksent opsyn.

Specifikationer

- Nominel effekt: 1,5 W
- Nominel spænding: 3,7 V
- Indgangsspænding: 5 V⎓(DC)
- Anvendelsesområde: 10 m^2

DK

Produktoversigt

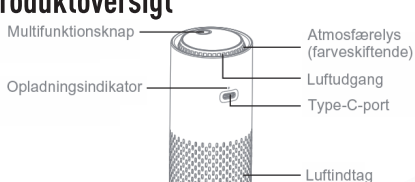



Opladning af batteri

- Oplad produktet helt før første brug for at sikre optimal ydeevne.
- Brug det medfølgende opladningskabel. Tilslut Type-C-stikket til opladningsporten på produktet, og USB-stikket til en strømkilde, der opfylder produktets specifikationer.
- Under opladning lyser indikatorlampen rødt. Lyset slukker, når batteriet er fuldt opladet.
- Når opladningen er færdig, skal opladningskablet kobles fra produktet og strømkilden.
- Når batteriniveauet er for lavt, blinker opladningsindikatoren grønt, og produktet slukker. Oplad produktet rettidigt.

Brugsanvisning

Regulering af luftstyrke


- Tryk én gang på knappen for at tænde luftrenseren på trin 1. Atmosfærelyset tændes også.
- Tryk på knappen igen for at skifte til trin 2.
- Tryk på knappen igen for at slukke produktet. Både blæseren og lyset slukker.

Styring af atmosfærelys


- Når atmosfærelyset er tændt, holdes knappen inde i 1,5 sekund for at vælge en enkelt farve. Farven blinker én gang for at bekræfte indstillingen.
- Hold knappen inde i 1,5 sekund igen for at slukke lyset.
- Hold knappen inde i 1,5 sekund igen for at tænde det gradient-skiftende lys.

DK

Rengøring

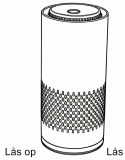

Figur 1

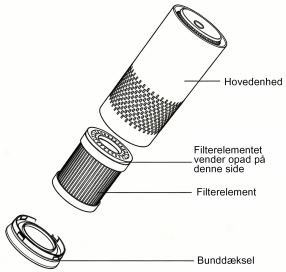

Figur 2

- Sluk altid for produktet før rengøring.
- Lås bunddækslet op som vist på figuren.
- Tag filteret ud, og ryst støvet af. Vask ikke filteret.
- Bemærk: Det anbefales at udskifte filteret hver 4.–6. måned.
- Efter rengøring eller udskiftning af filteret samles det korrekt, og bunddækslet låses.
- Tør ydersiden af med en blød, tør klud. Brug ikke slibende rengøringsmidler, kemikalier eller opløsningsmidler.
- Rengør luftudgange og luftindtag regelmæssigt for at reducere risikoen for brand.

Sorteringsvejledning

Elektrisk og elektronisk udstyr indeholder materialer, komponenter og stoffer, der kan være farlige og skadelige for menneskers sundhed og for miljøet, når affaldet af elektrisk og elektronisk udstyr (WEEE) ikke bortskaffes korrekt. Produkter, der er mærket med "overkrydsede skraldespand", er elektrisk og elektronisk udstyr. Den krydsede skraldespand symboliserer, at affald af elektrisk og elektronisk udstyr ikke må bortskaffes sammen med usorteret husholdningsaffald, men skal indsamles særskilt. Til dette formål har alle kommuner etableret indsamlingsordninger, hvor affald af elektrisk og elektronisk udstyr gratis kan afleveres af borgerne på genbrugsstationer eller andre indsamlingssteder eller hentes direkte fra husholdningerne. Nærmere information skal indhentes hos kommunens tekniske forvaltning.

Fremstillet for og importeret af:

Stock Group A/S
Gammelmarksvej 11
DK-7100 Vejle
www.stockgroup.dk

ENG

Important Safety Instructions

Before using this product, please read this user manual carefully and keep it for future reference. Use this product only as described in this manual and for its intended purpose. Improper use may result in damage to the product, personal injury, or property damage.


- Indoor use only. Do not use the air purifier outdoors.
- Do not block the air outlets or air inlets.
- Never insert foreign objects into the openings, as this may cause electric shock or damage to the air purifier.
- Do not use the air purifier without the filter installed.
- The air purifier must be used in an upright position.
- Place the air purifier where it cannot easily be knocked over by people in the household.
- Make sure there are no flammable materials near the product during use. Do not use the air purifier where combustible gases or vapours are present.
- Handle the product with care. Do not drop it or expose it to direct sunlight, high temperatures, or high humidity.
- Do not immerse the product in water or any other liquid.
- To prevent damage, always transport the product in its original packaging.
- Do not use the product if it is faulty. Do not attempt to repair it yourself. Repairs must only be carried out by an authorised dealer or a qualified professional.
- The built-in LEDs cannot be replaced.
- This appliance can be used by children aged 8 years and above and by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children must not play with this product.
- Cleaning and user maintenance must not be carried out by children without adult supervision.

Specifications


- Rated power: 1.5 W
- Rated voltage: 3.7 V
- Input voltage: 5 V ⎓ (DC)
- Applicable area: 10 m^2

ENG

Product Overview

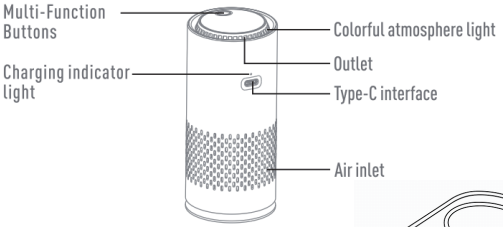

Battery charging

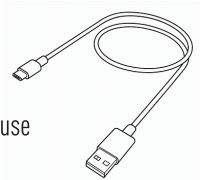

- Fully charge the product before first use to ensure optimal performance
- Use the supplied charging cable. Connect the Type-C plug to the charging port on the product, and the USB plug to a power source that meets the product specifications.
- During charging, the indicator light glows red. The light turns off when the battery is fully charged.
- After charging, disconnect the charging cable from the product and the power source.
- When the battery level is too low, the charging indicator flashes green and the product turns off. Please charge the product promptly.

Operating Instructions

Controlling air intensity

- Press the button once to turn the air purifier on at level 1. The atmosphere light will also turn on.
- Press the button again to switch to level 2.
- Press the button again to turn the product off. Both the fan and the light will turn off .

Controlling the atmosphere light

- When the atmosphere light is on, press and hold the button for 1.5 seconds to set a single colour. The colour will flash once to confirm the setting.
- Press and hold for 1.5 seconds again to turn the light off.
- Press and hold for 1.5 seconds again to turn on the gradient (colour-changing) light.

ENG

Cleaning

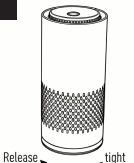


Figure 1

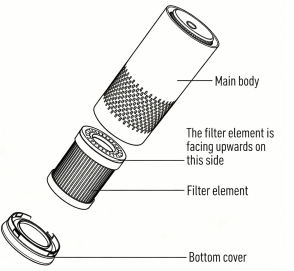


Figure 2

- Always switch off the product before cleaning.
- Unlock the bottom cover as shown in the figure.
- Take out the filter and shake off the dust. Do not wash the filter.
- Note: It is recommended to replace the filter every 4–6 months.
- After cleaning or replacing the filter, reassemble it correctly and lock the bottom cover.
- Wipe the exterior with a soft, dry cloth. Do not use abrasive cleaners, chemicals, or solvents.
- Clean the air outlets and air inlets regularly to reduce the risk of fire.

Sorting guide

Electrical and electronic equipment contains materials, components, and substances that can be hazardous and harmful to human health and the environment if waste from electrical and electronic equipment (WEEE) is not disposed of properly. Products labeled with the "crossed-out wheeled bin" are electrical and electronic equipment. The crossed-out wheeled bin symbol indicates that waste from electrical and electronic equipment must not be disposed of with unsorted household waste but must be collected separately. For this purpose, all municipalities have established collection schemes where waste from electrical and electronic equipment can be delivered free of charge by citizens at recycling stations or other collection points or picked up directly from households. Further information can be obtained from the municipality's technical administration.

Manufactured for and imported by:

Stock Group A/S
Gammelmarksvej 11
DK-7100 Vejle
www.stockgroup.dk