SCANDINAVIAN
COLLECTION

Trådløs USB varmetæppe & kappe

SC-0838



VIGTIGT – GEM TIL SENERE BRUG

Læs denne manual grundigt, før du bruger produktet.
Vær særlig opmærksom på sikkerhedsinstruktionerne.
Gem manualen til senere brug.

Forklaring af symboler



Læs instruktionerne før brug.



Brug ikke produktet, hvis det er foldet eller krøllet.



Undgå at sætte nåle i produktet.



Må ikke bruges til børn i alderen 0–3 år.



Må ikke bleges.



Må ikke tørretumbles.



Må ikke renses.



Må ikke stryges.


Vigtige sikkerhedsinstruktioner


- Korrekt placering: Tænd/sluk-knappen skal vende udad.
- Til kontinuerlig brug anbefales den laveste indstilling.
- Kontroller tæppet før hver brug.
- Brug ikke tæppet, hvis det er beskadiget. Returnér det til forhandleren.
- Produktet er ikke beregnet til medicinsk eller hospitalsbrug.
- Brug ikke produktet, hvis du ikke kan mærke varme korrekt.
- Må ikke bruges på meget sårbare personer.
- Ikke egnet til børn under 3 år.
- Børn fra 8 år må kun bruge produktet under opsyn og hvis de forstår, hvordan det bruges sikkert.
- Personer med nedsatte fysiske, sensoriske eller mentale evner må kun bruge produktet under opsyn.
- Børn må ikke lege med produktet.
- Børn må ikke rengøre eller vedligeholde produktet uden opsyn.
- Sov ikke med tæppet, når det er indstillet til høj varme. Dette kan medføre forbrændinger eller overophedning.
- Brug ikke tæppet i længere perioder ad gangen.
- Brug ikke tæppet, hvis det er vådt.
- Rør aldrig ved tæppet, hvis det er faldet i vand. Træk straks stikket ud.
- Hold ledningen væk fra varme overflader.
- Forsøg ikke selv at reparere tæppet. Reparation må kun udføres af fagfolk.
- Hvis du har helbredsmæssige bekymringer, bør du kontakte din læge før brug.

Specifikationer

Størrelse: 150 × 80 cm
Input: DC 5V, 2A–2,1A

Brugsanvisning

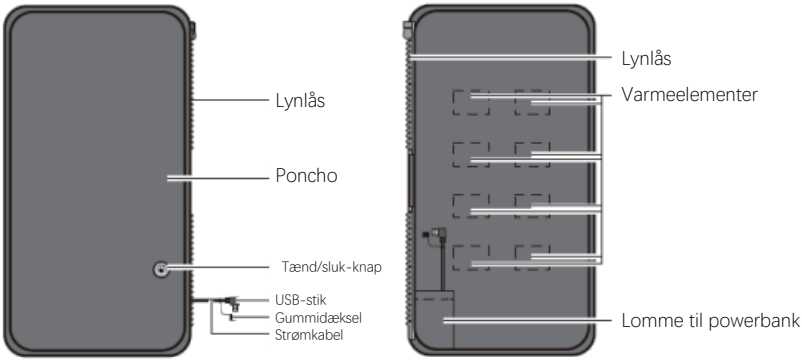

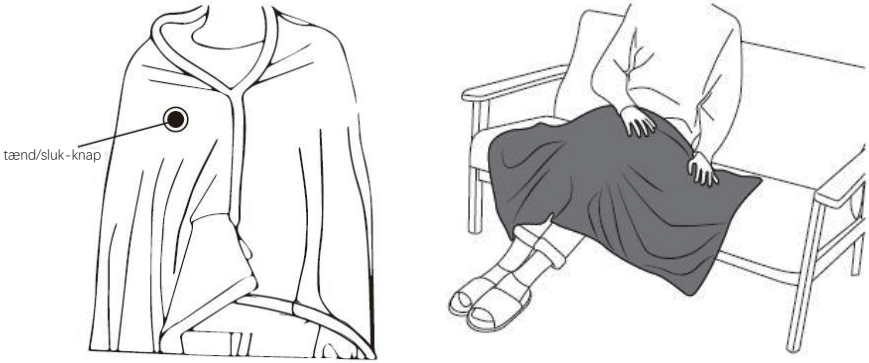

1. Tilslut USB Type-A kablet til en powerbank eller en strømforsyning (5V, 2A–2,1A).
2. Tryk og hold tænd/sluk-knappen nede for at tænde produktet.
   a. Standardindstillingen er høj varme (rødt lys).
3. For at ændre temperaturen, tryk kort på tænd/sluk-knappen:
   a. Tryk én gang: Medium varme (hvidt lys)
   b. Tryk igen: Lav varme (blåt lys)
4. For at slukke produktet, tryk og hold tænd/sluk-knappen nede i 3 sekunder.
   a. Indikatorlyset slukker.

Rengøring og opbevaring

- Sluk produktet og tag stikket ud før rengøring.
- Tør produktet af med en fugtig klud. Produktet må ikke vaskes.
- Brug ikke stærke eller slibende rengøringsmidler.
- Må ikke bleges, renses eller stryges.
- Nedsænk aldrig kablet i vand eller andre væsker.
- Hæng produktet til tørre et køligt sted efter rengøring.
- Brug eller opbevar ikke produktet, før det er helt tørt.
- Lad produktet køle af, før det foldes.
- Læg ikke tunge genstande ovenpå produktet under opbevaring.
- Opbevar produktet i original emballage på et rent og tørt sted.
- Kontroller produktet jævnligt for skader.

Sikkerhedsinformation

- Brug ikke produktet ved høje temperaturer eller i våde/fugtige omgivelser.
- Sluk produktet, når det ikke er i brug.
- Sørg for, at temperaturen er behagelig for dig.
- Hvis du oplever ubehag eller smerte, skal du straks stoppe brugen.
- Ved brug af powerbank:
  Sørg for, at output er DC 5V / 2A–2,1A
  Oplad powerbanken før brug
  Fjern powerbanken, når den ikke er i brug
- Hvis de røde, blå og grønne lys blinker, og produktet slukker, betyder det kortslutning. Stop straks brugen.
- Åbn eller reparer ikke produktet selv.

SORTERINGSVEJLEDNING

Elektrisk og elektronisk udstyr indeholder materialer, komponenter og stoffer, der kan være farlige og skadelige for menneskers sundhed og for miljøet, når affaldet af elektrisk og elektronisk udstyr (WEEE) ikke bortskaffes korrekt. Produkter, der er mærket med "overkrydsede skraldespand", er elektrisk og elektronisk udstyr. Den krydsede skraldespand symboliserer, at affald af elektrisk og elektronisk udstyr ikke må bortskaffes sammen med usorteret husholdningsaffald, men skal indsamles særskilt. Til dette formål har alle kommuner etableret indsamlingsordninger, hvor affald af elektrisk og elektronisk udstyr gratis kan afleveres af borgerne på genbrugsstationer eller andre indsamlingssteder eller hentes direkte fra husholdningerne. Nærmere information skal indhentes hos kommunens tekniske forvaltning.

Fremstillet for og importeret af:

Stock Group A/S Gammelmarksvej 11
DK- 7100 Vejle
www.stockgroup.dk



ENG

IMPORTANT - KEEP FOR FUTURE USE

Read this manual carefully before using the product.
Pay special attention to the safety instructions.
Keep this manual for future reference.

Symbols Explained


Read the instructions before use.


Do not use the product if it is folded or wrinkled.


Do not insert pins into the poncho.



Not to be used for children aged 0-3 years.


Do not bleach.


Do not tumble dry.


Do not dry clean.


Do not iron.


Important instruction


- Intended orientation: Power button facing out.
- For continuous use,the recommended setting is lowest level.
- Check the blanket before each use.
- Do not use the blanket if it is damaged.Return it to the supplier or dealer.
- This product is not for medical or hospital use.
- Do not use if you cannot feel heat properly.
- Do not use on very vulnerable persons.
- Not suitable for children under 3 years.
- Children aged 8 years and above may use this product if they are supervised and understand how to use it safely.
- Persons with reduced physical,sensory,or mental abilities may use the product if supervised.
- Children must not play with the product.
- Children must not clean or maintain the product without supervision.
- Do not sleep while the blanket is set to a high temperature. This may cause burns or overheating.
- Do not use the blanket for long periods of time.
- Do not use the blanket if it is wet.
- Never touch the blanket if it falls into water. Unplug it immediately.
- Keep the cable away from hot surfaces.
- Do not repair the blanket yourself.Repairs must be done by qualified professionals.
- If you have any health concerns,consult your doctor before use.

Specifications

Size:150x80CM

Input: DC5V, 2A or 2.1A

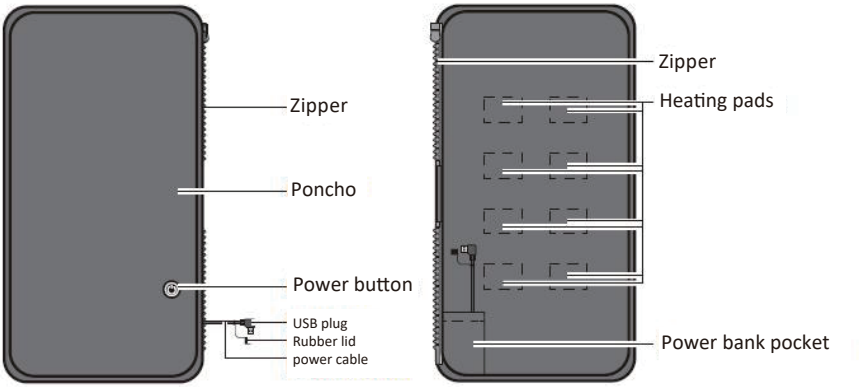

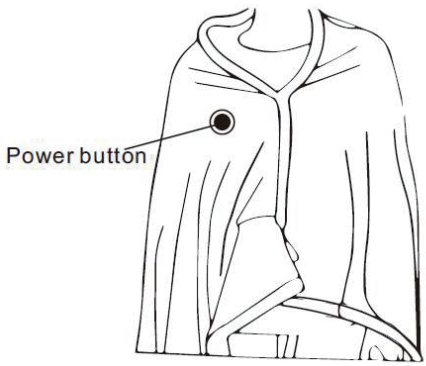



1. Plug the USB Type-A cable into a power bank or a power supply [5V,2A-2.1A).
2. Press and hold the power button to turn on the product.
   a. The default setting is high heat (red light).
3. To change the temperature, press the power button briefly:
   a. Press once: Medium heat (white light)
   b. Press again: Low heat (blue light)
4. To turn off the product, press and hold the power button for 3 seconds.
   a. The indicator light will turn off.

Cleaning and Storage

- Turn off the product and unplug it before cleaning.
- Wipe with a damp cloth. Do not wash the product.
- Do not use strong or abrasive cleaning agents.
- Do not bleach, dry clean, or iron the product.
- Never place the cable in water or other liquids.
- After cleaning, hang the product in a cool place to dry.
- Do not use or store the product until it is completely dry.
- Let the product cool down before folding.
- Do not place heavy objects on the product during storage.
- Store in the original packaging in a clean, dry place.
- Check the product regularly for damage.

Safety Information

- Do not use the product in high temperatures or in wet or damp environments.
- Turn off the product when not in use.
- Make sure the temperature is comfortable for you.
- If you feel discomfort or pain, stop using the product immediately.
- When using a power bank:
  - Make sure the output is DC 5V / 2A–2.1A
  - Charge the power bank before use
  - Remove the power bank when not in use
- If the red, blue, and green lights flash and the product turns off, it indicates a short circuit. Stop using the product immediately.
- Do not open or repair the product yourself.

SORTING GUIDE

Electrical and electronic equipment contains materials, components, and substances that can be hazardous and harmful to human health and the environment if waste from electrical and electronic equipment (WEEE) is not disposed of properly. Products labeled with the "crossed-out wheeled bin" are electrical and electronic equipment. The crossed-out wheeled bin symbol indicates that waste from electrical and electronic equipment must not be disposed of with unsorted household waste but must be collected separately. For this purpose, all municipalities have established collection schemes where waste from electrical and electronic equipment can be delivered free of charge by citizens at recycling stations or other collection points or picked up directly from households. Further information can be obtained from the municipality's technical administration.

Manufactured for and imported by:
Stock Group A/S Gammelmarksvej 11
DK- 7100 Vejle
www.stockgroup.dk

