SCANDINAVIAN
COLLECTION

Genopladeligt varmetørklæde

SC-3563



Tekniske specifikationer

- Nominel spænding: 5 V
- Nominel effekt: 3.5 W
- Anbefalet strømbank-output: 5 V/2 A
- USB-stiktype: Type-A

Produktoversigt

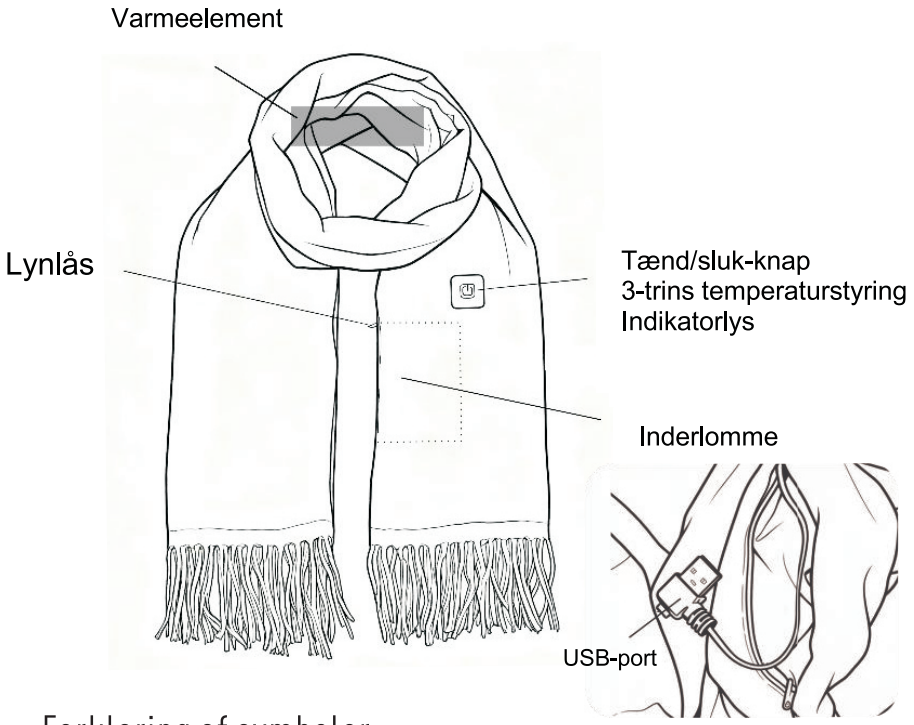

Forklaring af symboler

- Læs instruktionerne inden brug.
- Brug ikke produktet, hvis det er foldet eller rynket.
- Stik ikke nåle i tørklædet.
- Ikke til børn i alderen 0–3 år.
- Håndvask.
- Må ikke bleges.
- Må ikke tørretumbles.
- Må ikke renses kemisk.
- Må ikke stryges.

Vigtige sikkerhedsinstruktioner

Læs hele manualen og alle sikkerhedsinstruktioner grundigt, inden produktet tages i brug, for at sikre korrekt og sikker anvendelse.
Gem denne manual til fremtidig reference.

- Dette produkt er ikke til medicinsk eller hospitalsbrug.
- Brug ikke produktet, hvis du ikke kan mærke varme korrekt.
- Brug ikke produktet på meget sårbare personer.
- Ikke egnet til børn under 3 år.
- Børn fra 8 år og derover må bruge produktet, hvis de er under opsyn og forstår, hvordan det bruges sikkert.
- Børn må ikke lege med produktet.
- Børn må ikke rengøre eller vedligeholde produktet uden opsyn.
- Personer med nedsat fysisk, sensorisk eller mental kapacitet må bruge produktet under opsyn.
- Sov ikke, mens tørklædet er indstillet til høj temperatur. Det kan forårsage forbrændinger eller overophedning. Sluk for strømmen inden sengetid.
- Undgå at bruge produktet på samme sted på huden ved høje temperaturer i mere end 15 minutter. Fjern det straks, hvis der opstår unormale reaktioner.
- Rør aldrig ved produktet, hvis det falder i vand. Tag straks stikket ud.
- Hold kablet væk fra varme overflader. Undgå kontakt med antændelseskilder, ætsende væsker og andre ugunstige miljøer.
- Sørg for, at strømmen er afbrudt inden vask. Produktet skal tørre helt, inden det bruges igen.
- Brug ikke produktet, når det er vådt.
- Stik ikke nåle i tørklædet.
- Forsøg ikke selv at reparere produktet. Reparation må kun udføres af kvalificerede fagfolk.
- Kontakt din læge inden brug, hvis du har helbredsmæssige bekymringer.
- Tilsigtet orientering: Tænd/sluk-knappen vender udad.
- Til kontinuerlig brug anbefales den laveste indstilling.
- Tjek tørklædet inden hver brug. Brug det ikke, hvis det er beskadiget.
- Frakobl USB-kablet, når produktet ikke er i brug.

Funktionsbeskrivelse

Produktet betjenes med én knap.

- Tænd: Hold kontaktknappen nede i 3 sekunder. Enheden starter i første gear. Den røde indikator blinker – output er på maksimal kapacitet (100 %), temperaturen stabiliserer sig på ca. 50 °C.

Hvis der ikke foretages handling, skifter enheden automatisk til blåt gear efter 5 minutter.

- Tryk igen for andet gear: Blåt lys tændes – output på 75 %, temperaturen er ca. 45 °C.
- Tryk igen for tredje gear: Grønt lys tændes – output på 60 %, temperaturen er ca. 40 °C.
- Tryk herefter igen for at skifte tilbage til rødt, blåt og grønt gear i rækkefølge.
- Sluk: Hold knappen nede i 3 sekunder. Enheden slukker automatisk efter 150 minutter kontinuerlig brug.

Brug af powerbank

- Brug den medfølgende powerbank.
- Oplad powerbank inden brug.
- Fjern powerbank, når produktet ikke er I brug.

Rengøring og opbevaring

- Sluk for produktet og fjern altid batteriet inden vask. Stik batteriforbindelseskablet ind i batteriposen. Bemærk: batteriet må ikke vaskes.
- Håndvask kun – vask forsigtigt med hånden, skyl med rent vand, og vrid ikke tørklædet.
- Brug ikke vaskemaskine til centrifugering.
- Lufttør naturligt.
- Tørretumbles ikke.
- Bleges ikke, tørretumbles ikke, renses ikke kemisk, stryges ikke.
- Hæng produktet til tørring på et køligt sted efter vask.
- Brug eller opbevar ikke produktet, inden det er helt tørt.
- Lad produktet køle af, inden det foldes.
- Læg ikke tunge genstande på produktet under opbevaring.
- Opbevares i originalemballagen på et rent, tørt sted.
- Kontroller regelmæssigt produktet for skader.

Sikkerhedsoplysninger

- Brug ikke produktet ved høje temperaturer eller I våde/fugtige omgivelser.
- Sluk for produktet, når det ikke er i brug.
- Sørg for, at temperaturen er behagelig for dig.
- Stop straks brugen, hvis du oplever ubehag eller smerte.

Vedligeholdelse af batteri

- Udsæt ikke batteriet for varmekilder, og lad det ikke blive nedsænket i vand eller tabt. Demonter ikke batteriet.
- Hvis batteriet ikke bruges i lang tid, oplades det fuldt op inden opbevaring. Det anbefales at oplade batteriet hver 60. dag.
- Opbevar batteriet et tørt og køligt sted.
- Batteritype: Li-ion
- Batterikapacitet: 7,4Wh
- Batteriet kan udskiftes af brugeren

SORTERINGSVEJLEDNING

Elektrisk og elektronisk udstyr indeholder materialer, komponenter og stoffer, der kan være farlige og skadelige for menneskers sundhed og for miljøet, når affaldet af elektrisk og elektronisk udstyr (WEEE) ikke bortskaffes korrekt. Produkter, der er mærket med "overkrydsede skraldespand", er elektrisk og elektronisk udstyr. Den krydsede skraldespand symboliserer, at affald af elektrisk og elektronisk udstyr ikke må bortskaffes sammen med usorteret husholdningsaffald, men skal indsamles særskilt. Til dette formål har alle kommuner etableret indsamlingsordninger, hvor affald af elektrisk og elektronisk udstyr gratis kan afleveres af borgerne på genbrugsstationer eller andre indsamlingssteder eller hentes direkte fra husholdningerne. Nærmere information skal indhentes hos kommunens tekniske forvaltning.

Fremstillet for og importeret af:

Stock Group A/S
Gammelmarksvej 11
DK-7100 Vejle
www.stockgroup.dk

Technical Specifications

- Rated voltage: 5 V
- Rated power: 3.5 W
- Recommended power bank output: 5 V/2 A
- USB connector type:Type-A

Product Overview

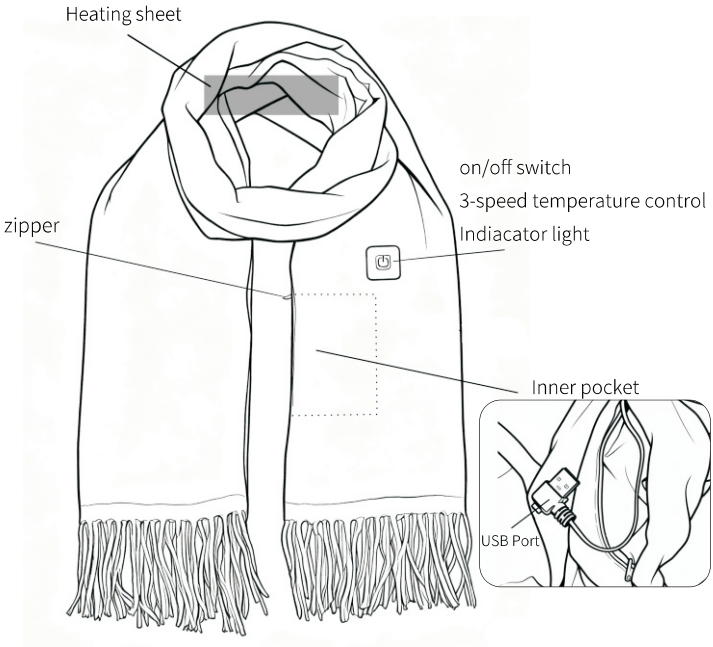

Symbols Explained

- Read the instructions before use.
- Do not use the product if it is folded or wrinkled.
- Do not insert pins into the scarf.
- Not to be used for children aged 0–3 years.
- Hand wash only.
- Do not bleach.
- Do not tumble dry.
- Do not dry clean.
- Do not iron.

Important Safety Instructions

Before using this product, please read the complete manual and all safety instructions to ensure safe and proper use.

Keep this manual for future reference.

- This product is not for medical or hospital use.
- Do not use if you cannot feel heat properly.
- Do not use on very vulnerable persons.
- Not suitable for children under 3 years.
- Children aged 8 years and above may use this product if they are supervised and understand how to use it safely.
- Children must not play with the product.
- Children must not clean or maintain the product without supervision.
- Persons with reduced physical, sensory, or mental abilities may use the product if supervised.
- Do not sleep while the scarf is set to a high temperature. This may cause burns or overheating. Turn off the power before going to bed.
- Avoid using the product on the same area of skin at high temperatures for more than 15 minutes. If there is any abnormality, remove it immediately.
- Never touch the product if it falls into water. Unplug it immediately.
- Keep the cable away from hot surfaces. Do not bring it near ignition sources, corrosive liquids, or other hazardous environments.
- Make sure the power is disconnected before washing. The product must be completely dry before use.
- Do not use when wet.
- Do not insert pins into the scarf.
- Do not attempt to repair the product yourself. Repairs must be carried out by qualified professionals.
- If you have any health concerns, consult your doctor before use.
- Intended orientation: Power button facing out.
- For continuous use, the recommended setting is the lowest level.
- Check the scarf before each use. Do not use it if it is damaged.
- Always unplug the USB cable when not using the product.

Function Description

This product uses single-button operation.

- Power on: Press and hold the control switch for 3 seconds. The device starts at the first setting. The red indicator flashes, indicating maximum output (100%) at approximately 50°C. If no action is taken, the device automatically switches to the blue setting after 5 minutes.

- Press again for the second setting: The blue light turns on – output at 75%, temperature approximately 45°C.
- Press again for the third setting: The green light turns on – output at 60%, temperature approximately 40°C.
- Continue pressing to cycle back through red, blue, and green settings.
- Power off: Press and hold for 3 seconds. The device also automatically turns off after 150 minutes of continuous use.

Using the Power Bank

- Use the power bank included in the box.
- Charge the power bank before use.
- Remove the power bank when not in use.

Cleaning and Storage

- Turn off the product and remove the battery before washing. Insert the battery connector cable into the battery pocket. Note: the battery cannot be washed.
- Hand wash only – wash gently by hand, rinse with clean water, and do not wring.
- Do not use the spin cycle on a washing machine.
- Air dry naturally.
- Do not tumble dry.
- Do not bleach, tumble dry, dry clean, or iron.
- After washing, hang the product in a cool place to dry.
- Do not use or store the product until it is completely dry.
- Allow the product to cool down before folding.
- Do not place heavy objects on the product during storage.
- Store in the original packaging in a clean, dry place.
- Check the product regularly for damage.

Safety Information

- Do not use in high temperatures or in wet or damp environments.
- Turn off the product when not in use.
- Make sure the temperature is comfortable for you.
- If you feel discomfort or pain, stop using the product immediately.

Battery Maintenance

- Do not expose the battery to heat sources, and do not immerse it in water or drop it. Do not dismantle the battery.
- If the battery is not used for a long time, fully charge it before storage. It is recommended to charge the battery every 60 days.
- Store the battery in a cool, dry place.
- Battery chemistry type:Li-ion
- Battery capacity:7.4Wh
- The battery can be replaced by user

SORTING GUIDE

Electrical and electronic equipment contains materials, components, and substances that can be hazardous and harmful to human health and the environment if waste from electrical and electronic equipment (WEEE) is not disposed of properly. Products labeled with the "crossed-out wheeled bin" are electrical and electronic equipment. The crossed-out wheeled bin symbol indicates that waste from electrical and electronic equipment must not be disposed of with unsorted household waste but must be collected separately. For this purpose, all municipalities have established collection schemes where waste from electrical and electronic equipment can be delivered free of charge by citizens at recycling stations or other collection points or picked up directly from households. Further information can be obtained from the municipality's technical administration.

Manufactured for and imported by:

Stock Group A/S
Gammelmarksvej 11
DK-7100 Vejle
www.stockgroup.dk